

Scope of Supply/Bill of Material & Mounting Drawings

Part Number:


Part Description: HEADLIGHTGUARD TRIUMPH TIGER 900GT PRO

Installation / Parts List / Bill of Material for Mounting

NO.	Description	Quantity	Torque*(N-M)	Remarks**
1	HLG TIGER 900	1		
2	AD MID	1		
3	BUSH RUBBER 5 mm	4		
4	Socket button head screw M5x10mm	4		Use Liquid Thread Locker
5	Bush Delrin M6 13x11mm	2		
6	Countersunk Washer M6	2		
7	Socket countersunk head screw M6x25	2		Use Liquid Thread Locker
8	AD LH TIGER900	1		
9	Washer M5	6		
10	Socket button head screw M5x6mm	2		Use Liquid Thread Locker
11	RUBBER GROMMET	4		
12	AD RH TIGER900	1		
SRC Design uses Metric System of Measurement and all dimensions in Millimeters				
Perammended to use the Targue specified in the table				

Recommended to use the Torque specified in the table

Denotes Usage of Liquid Thread Locker in specified Locations

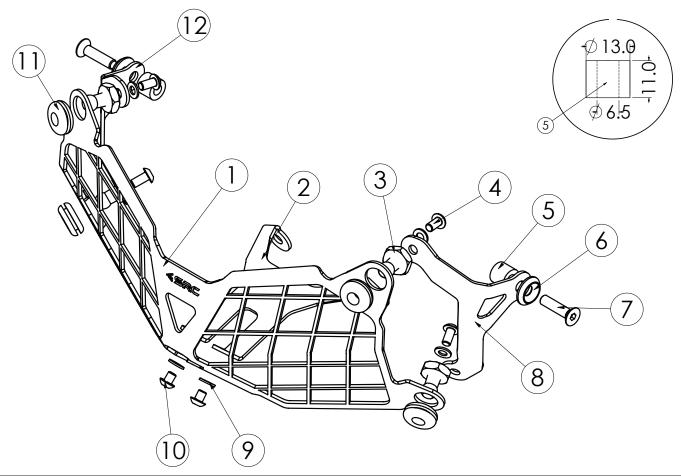



≪SRC

DESCRIPTION

















Socket button head screw M5x6mm



AD RH TIGER900

**Some parts have already been assembled.

TOOLS REQUIRED











Torque Values to be used in Mounting Instructions

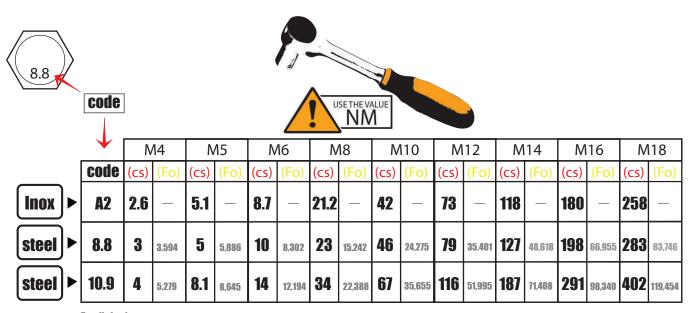

Tensile load (Fo

The force in newtons (N) which maintains pressure contact between assembled componets

Tightening torque (Cs)[values are in N-m]

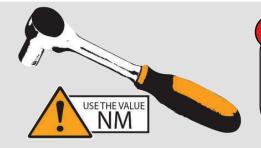

symbol (NM), refer to the reference value given in the table above for use in the required operation And safe in operation and accuracy in inserting parts.




The tool in the picture is (thread locked). When you see this mark, please insert the medicine to the point where the nut is to be inserted for the firmness and accuracy of the insertion work.

copyright By SRC

Please check and check again to make sure that all are inserted. Every piece and don't forget any step to be safe.




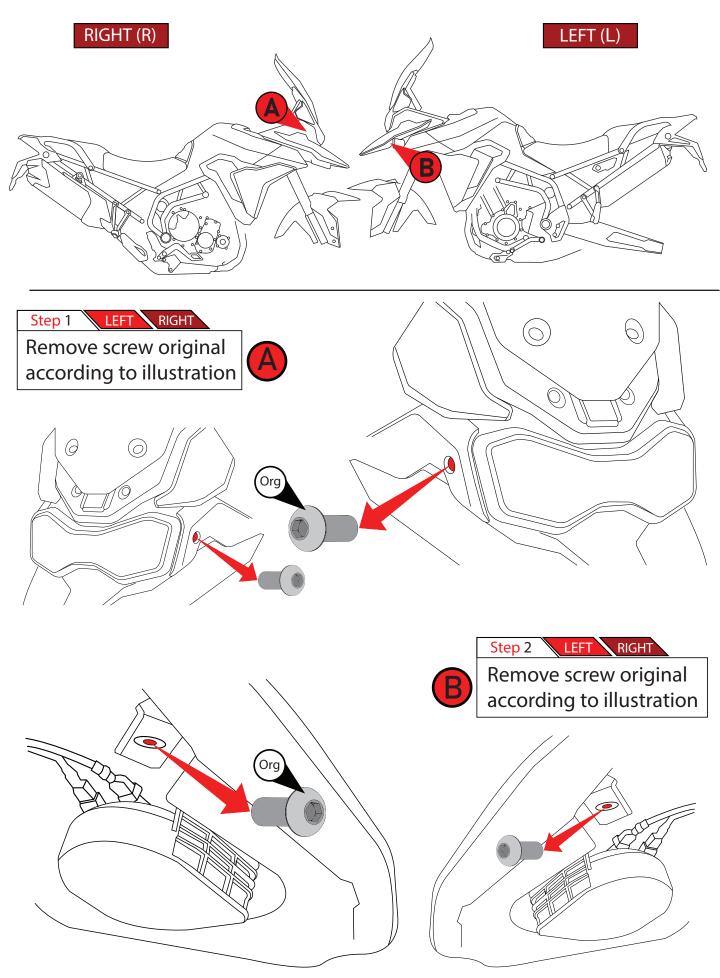






Remove the front fairing by gently pulling it out, as shown in the illustration.

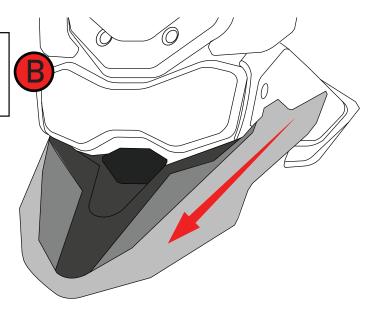

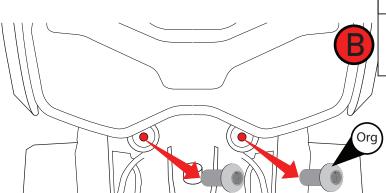


Step 4 LEFT RIGHT

Remove both original according to illustration

Step 5 LEFT RIGHT

Install AD MID and screw original as illustrated



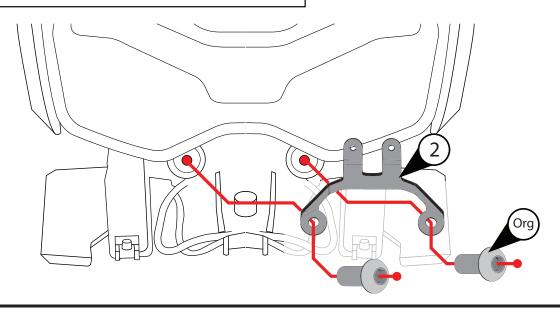






Installation steps




Install fairing and screw original screw as illustrated

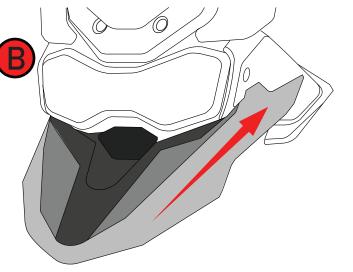

Step 7 RIGHT




Install Screw M6x25, Countersunk Washer M6, AD RH, Bush Delrin M6 13x11mm, as illustrated

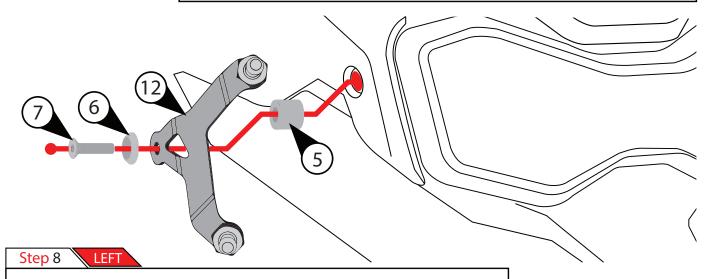


Install Screw M6x25, Countersunk Washer M6, AD LH, Bush Delrin M6 13x11mm, as illustrated



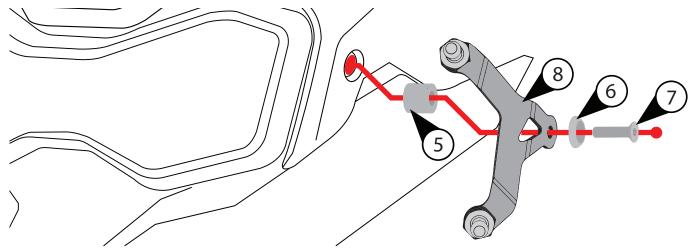



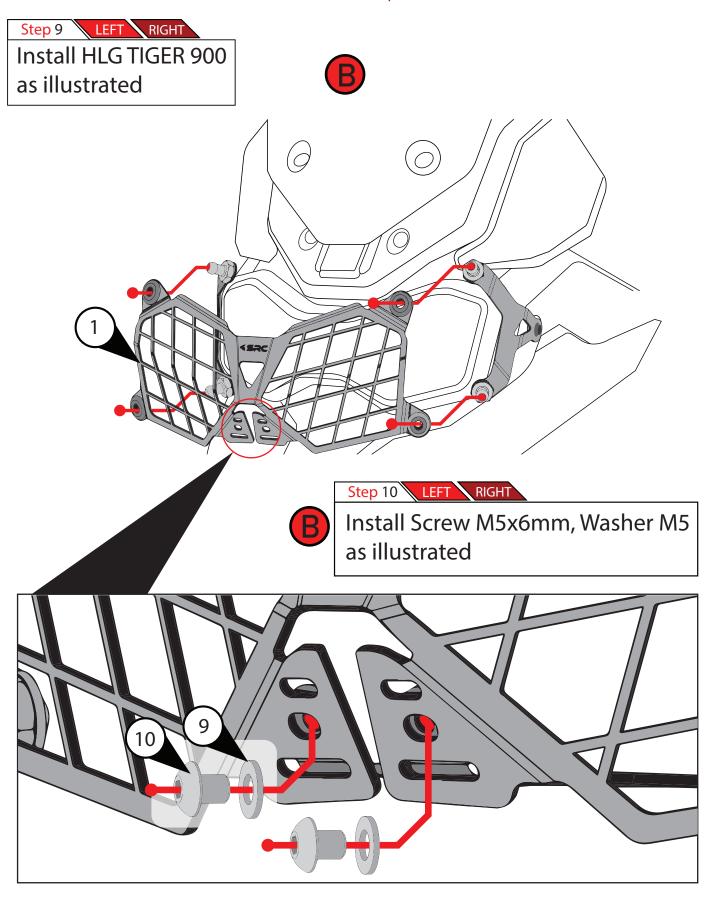



Make sure they are inserted correctly.





- (1.) We request you to pay attention to the Mounting Instructions in this document and follow the step-by-step procedures.
- (2.) This Mounting Instruction manual is a "Do It Yourself" (DIY) fitment manual of the Accessory part to the Vehicle. We have prepared this based on our experience and knowledge, related to the Vehicle, Part and its functional aspects
- (3.) SRC cannot guarantee the interchangeability of the parts to any other manufacturer's accessory part. It is advised to the User, to inspect and ensure the original state of all other Vehicle parts.
- (4.) We request you to bear in mind, that the Installed part can change the driving behaviour and/or the stability during driving or any other dynamic conditions.
- (5.) If you have the appropriate tools and another person to assist you in the mounting, it will help.
- (6.) After Completion of the Mounting and before taking on a First ride, Ensure and Check all functions of the Vehicle. It is always advised to check loosening of the fasteners after the first 50 kilo meters of ride and at regular intervals.
- (7.) To the maximum extent possible, our design use the current Mounting/Fitment of the Original Equipment, so that Installation of these accessories will not affect the Payload or Function of the Vehicle or the Part on which it is mounted to protect it.
- (8.) If any additional modifications are to be done, prior to the fitment of the accessories, it will be explicitly specified in the instruction sheets



